


Panasonic®

Basic Operating Instructions Digital Camera

Model No. **DMC-FZ48**

LUMIX

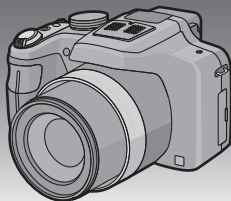

Before use, please read these instructions completely.



More detailed instructions on the operation of this camera are contained in "Operating Instructions for advanced features (PDF format)" in the supplied CD-ROM. Install it on your PC to read it.



Web Site: <http://www.panasonic-europe.com>

Model number suffix "EB" denotes UK model.

EB

VQT3R40

Dear Customer,

We would like to take this opportunity to thank you for purchasing this Panasonic Digital Camera. Please read these Operating Instructions carefully and keep them handy for future reference. Please note that the actual controls and components, menu items, etc. of your Digital Camera may look somewhat different from those shown in the illustrations in these Operating Instructions.

Carefully observe copyright laws.

- Recording of pre-recorded tapes or discs or other published or broadcast material for purposes other than your own private use may infringe copyright laws. Even for the purpose of private use, recording of certain material may be restricted.

Information for Your Safety

WARNING:

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,

- DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.
- USE ONLY THE RECOMMENDED ACCESSORIES.
- DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

THE SOCKET OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.



■ Product identification marking

Product	Location
Digital Camera	Bottom
Battery charger	Bottom

Caution for AC mains lead

For your safety, please read the following text carefully.

This appliance is supplied with a moulded three pin mains plug for your safety and convenience.

A 5-ampere fuse is fitted in this plug. Should the fuse need to be replaced please ensure that the replacement fuse has a rating of 5-ampere and that it is approved by ASTA or BSI to BS1362. Check for the ASTA mark  or the BSI mark  on the body of the fuse.

If the plug contains a removable fuse cover you must ensure that it is refitted when the fuse is replaced.

If you lose the fuse cover the plug must not be used until a replacement cover is obtained.

A replacement fuse cover can be purchased from your local dealer.

CAUTION!

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET IN YOUR HOME THEN THE FUSE SHOULD BE REMOVED AND THE PLUG CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO ANY 13- AMPERE SOCKET.

If a new plug is to be fitted please observe the wiring code as stated below. If in any doubt please consult a qualified electrician.

■ IMPORTANT


The wires in this mains lead are coloured in accordance with the following code:

Blue: Neutral, Brown: Live.

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured Blue must be connected to the terminal which is marked with the letter N or coloured Black or Blue.

The wire which is coloured Brown must be connected to the terminal which is marked with the letter L or coloured Brown or Red.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E, BY THE EARTH SYMBOL  OR COLOURED GREEN OR GREEN/YELLOW.

THIS PLUG IS NOT WATERPROOF-KEEP DRY.

■ Before use


Remove the connector cover.

■ How to replace the fuse


The location of the fuse differ according to the type of AC mains plug (figures A and B). Confirm the AC mains plug fitted and follow the instructions below.

Illustrations may differ from actual AC mains plug.

1. Open the fuse cover with a screwdriver.

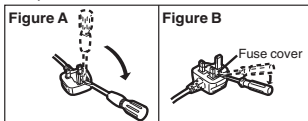

2. Replace the fuse and close or attach the fuse cover.

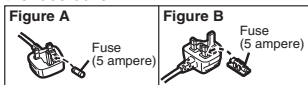

■ About the battery pack

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

- Do not heat or expose to flame.
- Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.

Warning

Risk of fire, explosion and burns. Do not disassemble, heat above 60 °C or incinerate.

■ About the battery charger

CAUTION!

- **DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.**
- **DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.**
- **DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.**
- **DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.**

- The battery charger is in the standby condition when the AC power supply cord is connected. The primary circuit is always "live" as long as the power cord is connected to an electrical outlet.

■ Cautions for Use

- Always use a genuine Panasonic AV cable (DMW-AVC1; optional).
- Always use a genuine Panasonic HDMI mini cable (RP-CDHM15, RP-CDHM30; optional).
Part numbers: RP-CDHM15 (1.5 m) (5 feet), RP-CDHM30 (3.0 m) (10 feet)
- Do not use any other USB connection cables except the supplied one.

Keep this unit as far away as possible from electromagnetic equipment (such as microwave ovens, TVs, video games etc.).

- If you use this unit on top of or near a TV, the pictures and/or sound on this unit may be disrupted by electromagnetic wave radiation.
- Do not use this unit near cell phones because doing so may result in noise adversely affecting the pictures and/or sound.
- Recorded data may be damaged, or pictures may be distorted, by strong magnetic fields created by speakers or large motors.
- Electromagnetic wave radiation generated by microprocessors may adversely affect this unit, disturbing the pictures and/or sound.
- If this unit is adversely affected by electromagnetic equipment and stops functioning properly, turn this unit off and remove the battery or disconnect AC adaptor (DMW-AC8E; optional). Then reinsert the battery or reconnect AC adaptor and turn this unit on.

Do not use this unit near radio transmitters or high-voltage lines.

- If you record near radio transmitters or high-voltage lines, the recorded pictures and/or sound may be adversely affected.

Information for Users on Collection and Disposal of Old Equipment and used Batteries



These symbols on the products, packaging, and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC and 2006/66/EC. By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.



For business users in the European Union

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

[Information on Disposal in other Countries outside the European Union]

These symbols are only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.



Cd

Note for the battery symbol (bottom two symbol examples):

This symbol might be used in combination with a chemical symbol. In this case it complies with the requirement set by the Directive for the chemical involved.

Contents

Information for Your Safety	2
Care of the camera	8
Accessories.....	9
Names and Functions of Main Parts	12
Charging the Battery	15
• Charging	15
• Approximate operating time and number of recordable pictures	17
About the Built-in Memory/the Card	18
Inserting and Removing the Card (optional)/the Battery	19
Setting Date/Time (Clock Set).....	20
• Changing the clock setting	20
Selecting the Recording Mode	21
Taking Pictures with Your Favourite Settings (Programme AE Mode)	23
• Programme Shift	24
Taking Pictures Using the Automatic Function (Intelligent Auto Mode)	25
Recording Motion Pictures	27
Playing Back Pictures ([NORMAL PLAY])	28
Deleting Pictures	28
Setting the Menu	29
Compensating the Exposure	30
Taking Pictures by Specifying the Aperture/Shutter Speed	31
• Aperture-Priority AE	31
• Shutter-Priority AE	31
• Manual Exposure Mode	32
Taking 3D pictures (3D Photo Mode).....	33
Reading the Operating Instructions (PDF format).....	34
Specifications	36

Care of the camera


Do not subject to strong vibration, shock, or pressure.

- The lens, LCD monitor, or external case may be damaged if used in following conditions. It may also malfunction or image may not be recorded.
 - Drop or hit the camera.
 - Press hard on the lens or the LCD monitor.
- **When camera is not in use or when using the playback feature, ensure that the lens is in the stored position, with lens cap on.**
- **There are times when rattling sounds or vibrations will come from the camera, but these are due to the motion of the aperture, the zoom and the motor and do not indicate a defect.**

This camera is not dust/splash/water proof.

Avoid using the camera at location with a lot of dust, water, sand, etc.

- Liquid, sand and other foreign material may get into the space around the lens, buttons, etc. Be particularly careful since it may not just cause malfunctions, but it may become unrepairable.
 - Places with a lot of sand or dust.
 - Places where water can come into contact with this unit such as when using it on a rainy day or on the beach.

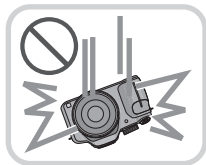

Accessories








Check that all the accessories are supplied before using the camera.
Product numbers correct as of August 2011. These may be subject to change.

- 1 Battery Pack
(Indicated as **battery pack** or **battery** in the text)
Charge the battery before use.
- 2 Battery Charger
(Indicated as **battery charger** or **charger** in the text)
- 3 AC Mains Lead
- 4 USB Connection Cable
- 5 CD-ROM
 - Software:
Use it to install the software to your PC.
 - Operating Instructions
- 6 Shoulder Strap
- 7 Lens Cap/Lens Cap String
- 8 Lens Hood

- SD Memory Card, SDHC Memory Card and SDXC Memory Card are indicated as **card** in the text.

- **The card is optional.**
You can record or play back pictures on the built-in memory when you are not using a card.

- Consult the dealer or your nearest Service Centre if you lose the supplied accessories. (You can purchase the accessories separately.)

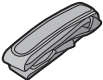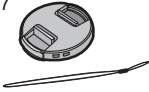1  DMW-BMB9E	2  DE-A84A
3  K2CT39A00002	4  K1HY08YY0017
5  VFF0839	6  VFC4453
7  VYQ5607	8  VYQ7134

Sales and Support Information

Customer Communications Centre

- For customers within the UK: 0844 844 3899
- For customers within Ireland: 01 289 8333
- For further support on your product, please visit our website:
www.panasonic.co.uk

Technical Support for AV Software

- For customers within the UK: 0844 844 3869
- For customers within Ireland: 01 289 8333

Direct Sales at Panasonic UK

- Order accessory and consumable items for your product with ease and confidence by phoning our Customer Communications Centre
Monday–Thursday 9:00 a.m.–5:30 p.m.,
Friday 9:30 a.m.–5:30 p.m. (Excluding public holidays)
- Or go on line through our Internet Accessory ordering application at
www.pas-europe.com.
- Most major credit and debit cards accepted.
- All enquiries transactions and distribution facilities are provided directly by Panasonic UK.
- It couldn't be simpler!
- Also available through our Internet is direct shopping for a wide range of finished products. Take a browse on our website for further details.

■ Optional Accessories

Battery Pack	DMW-BMB9
AC Adaptor ^{*1}	DMW-AC8
DC Coupler ^{*1}	DMW-DCC6
MC Protector	DMW-LMC52
ND Filter	DMW-LND52
PL Filter (Circular Type)	DMW-LPL52
Tele Conversion Lens ^{*2}	DMW-LT55
Close-up Lens ^{*2}	DMW-LC55
Lens Adapter	DMW-LA5
AV Cable	DMW-AVC1
HDMI mini Cable	RP-CDHM15, RP-CDHM30
Class 10 64 GB SDXC Memory Card	RP-SDU64GE1K
Class 10 32 GB SDHC Memory Card	RP-SDA32GE1K/RP-SDU32GE1K
Class 10 16 GB SDHC Memory Card	RP-SDA16GE1K/RP-SDU16GE1K
Class 10 8 GB SDHC Memory Card	RP-SDA08GE1K/RP-SDU08GE1K
Class 10 4 GB SDHC Memory Card	RP-SDU04GE1K
Class 6 32 GB SDHC Memory Card	RP-SDQ32GE1K
Class 6 16 GB SDHC Memory Card	RP-SDQ16GE1K
Class 6 8 GB SDHC Memory Card	RP-SDQ08GE1K
Class 6 4 GB SDHC Memory Card	RP-SDQ04GE1K
Class 4 16 GB SDHC Memory Card	RP-SDN16GE1A
Class 4 8 GB SDHC Memory Card	RP-SDN08GE1A
Class 4 4 GB SDHC Memory Card	RP-SDN04GE1A
Class 4 2 GB SD Memory Card	RP-SDL02GE1K/RP-SDN02GE1A


*1 The AC Adaptor (optional) can only be used with the designated Panasonic DC Coupler (optional). The AC adaptor (optional) cannot be used by itself.

*2 The lens adapter (optional) is necessary to attach a tele conversion lens or close-up lens.


Some optional accessories may not be available in some countries.

Names and Functions of Main Parts

- 1 Lens
- 2 Self-timer indicator
AF Assist Lamp
- 3 Flash

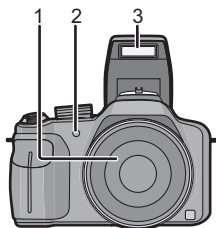

- 4 Flash open button
- 5 Diopter adjustment dial
- 6 Viewfinder
- 7 [EVF/LCD] button
- 8 [AF/AE LOCK] button
- 9 Rear dial
- 10 [AF/AF-LOCK/MF] button
- 11 Playback button
- 12 [MENU/SET] button

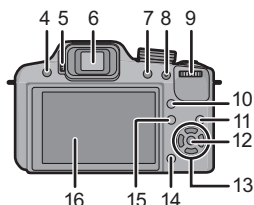

- 13 Cursor buttons

- ▲/ Exposure compensation/
Auto Bracket/Flash output adjustment
- ◀/ Self-timer button
- ▶/ ISO
- ▼/ Function button


The following menus can be assigned.

[PHOTO STYLE]/[ASPECT RATIO]/[QUALITY]/[METERING MODE]/
[WHITE BALANCE]/[I.DYNAMIC]/[GUIDE LINE]/[REC AREA]/
[REMAINING DISP.]


- 14 [Q.MENU] button/Delete button
- 15 [DISPLAY] button
- 16 LCD monitor

- 17 Stereo microphone
- 18 Zoom lever
- 19 Shutter button
- 20 Motion picture button
- 21 [FOCUS] button
- 22 Power lamp
- 23 Camera ON/OFF switch
- 24 Mode dial
- 25 Speaker

- Do not cover the speaker with your fingers.

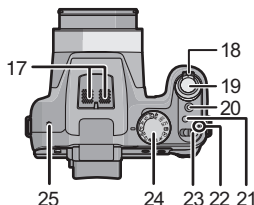


- 26 Shoulder strap eyelet
- 27 [HDMI] socket
- 28 [AV OUT/DIGITAL] socket
- 29 Terminal door
- 30 Lens barrel

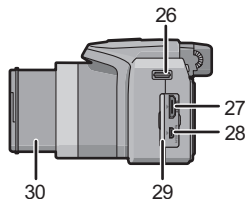

- 31 Tripod receptacle
- 32 Release lever
- 33 Card/Battery door
- 34 DC coupler cover

- When using an AC adaptor, ensure that the Panasonic DC coupler (DMW-DCC6; optional) and AC adaptor (DMW-AC8E; optional) are used.
- Always use a genuine Panasonic AC adaptor (DMW-AC8E; optional).
- When using an AC adaptor, use the AC Mains Lead supplied with the AC adaptor.
- It is recommended to use a fully charged battery or AC adaptor when recording motion pictures.
- If while recording motion pictures using the AC adaptor and the power supply is cut off due to a power outage or if the AC adaptor is disconnected etc., the motion picture being recorded will not be recorded.

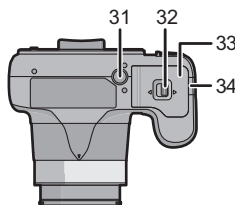

Cursor buttons/[MENU/SET] button

This document expresses the up, down, left, and right of the cursor button as follows, or as ▲/▼/◀/▶.

Cursor button:

Selection of items or setting of values etc., is performed.

[MENU/SET] button:

Confirmation of setting contents, etc., is performed.

e.g.: When you press the ▼ (down) button



or

Press ▼

Rear Dial

There are 2 ways to operate the rear dial, rotating left or right, and deciding by pressing.

Rotating:

Selection of items or setting of values is performed during the various settings.

Pressing:

Operations that are the same as [MENU/SET] button, such as determine settings, etc., are performed during the various settings.

• Rear dial is described as follows in these operating instructions.

e.g.: Rotating left or right



e.g.: Pressing the rear dial



Charging the Battery

■ About batteries that you can use with this unit

The battery that can be used with this unit is DMW-BMB9E.

It has been found that counterfeit battery packs which look very similar to the genuine product are made available to purchase in some markets. Some of these battery packs are not adequately protected with internal protection to meet the requirements of appropriate safety standards. There is a possibility that these battery packs may lead to fire or explosion. Please be advised that we are not liable for any accident or failure occurring as a result of use of a counterfeit battery pack. To ensure that safe products are used we would recommend that a genuine Panasonic battery pack is used.


- Use the dedicated charger and battery.

Charging

- The battery is not charged when the camera is shipped. Charge the battery before use.
- Charge the battery with the charger indoors.

1


Attach the battery paying attention to the direction of the battery.

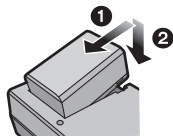

2

Connect the AC Mains Lead.

- The [CHARGE] indicator (A) lights up and charging begins.

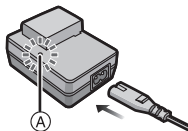

■ About the [CHARGE] indicator

The [CHARGE] indicator turns on:

The [CHARGE] indicator is turned on during charging.

The [CHARGE] indicator turns off:

The [CHARGE] indicator will turn off once the charging has completed without any problem. (Disconnect the charger from the electrical socket and detach the battery after charging is completed.)

• When the [CHARGE] indicator flashes

- The battery temperature is too high or too low. It is recommended to charge the battery again in an ambient temperature of between 10 °C and 30 °C (50 °F and 86 °F).
- The terminals of the charger or the battery are dirty. In this case, wipe them with a dry cloth.

■ Charging time

Charging time	Approx. 155 min
----------------------	------------------------

Approximate operating time and number of recordable pictures

Number of recordable pictures	Approx. 400 pictures
Recording time	Approx. 200 min

Recording conditions by CIPA standard

- CIPA is an abbreviation of [Camera & Imaging Products Association].
- Programme AE Mode
- Temperature: 23 °C (73.4 °F)/Humidity: 50%RH when LCD monitor is on.
- Using a Panasonic SD Memory Card (32 MB).
- Using the supplied battery.
- Starting recording 30 seconds after the camera is turned on. (When the Optical Image Stabilizer function is set to [ON].)
- **Recording once every 30 seconds** with full flash every second recording.
- Rotating the zoom lever from Tele to Wide or vice versa in every recording.
- Turning the camera off every 10 recordings and leaving it until the temperature of the battery decreases.

Playback time	Approx. 330 min
---------------	-----------------

About the Built-in Memory/the Card

Built-in Memory

- **Memory size: Approx. 70 MB**
- The access time for the built-in memory may be longer than the access time for a card.

Card

The following cards which conform to the SD video standard can be used with this unit.

(These cards are indicated as **card** in the text.)

	Remarks
SD Memory Card (8 MB to 2 GB)	<ul style="list-style-type: none">• Use a card with SD Speed Class* with “Class 4” or higher when recording motion pictures.• SDHC Memory Card can be used with SDHC Memory Card or SDXC Memory Card compatible equipment.• SDXC Memory Card can only be used with SDXC Memory Card compatible equipment.• Check that the PC and other equipment are compatible when using the SDXC Memory Cards. http://panasonic.net/avc/sdcard/information/SDXC.html• Only the cards with capacity listed left can be used.
SDHC Memory Card (4 GB to 32 GB)	
SDXC Memory Card (48 GB, 64 GB)	

- * SD Speed Class is the speed standard regarding continuous writing. Check via the label on the card, etc.

e.g.:

CLASS 



- Please confirm the latest information on the following website.

<http://panasonic.jp/support/global/cs/dsc/>

(This Site is English only.)



Note


- Keep the Memory Card out of reach of children to prevent swallowing.

Inserting and Removing the Card (optional)/the Battery

- Turn the power switch to [OFF] and confirm that the lens barrel is retracted.
- We recommend using a Panasonic card.

1 Slide the release lever in the direction of the arrow and open the card/battery door.

- Always use genuine Panasonic batteries (DMW-BMB9E).
- If you use other batteries, we cannot guarantee the quality of this product.

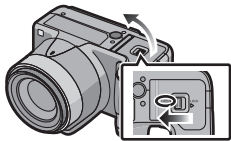


2 **Battery:** Being careful about the battery orientation, insert all the way until you hear a locking sound and then check that it is locked by lever (A).

Pull the lever (A) in the direction of the arrow to remove the battery.

Card: Push it securely all the way until you hear a “click” while being careful about the direction in which you insert it.


To remove the card, push the card until it clicks, then pull the card out upright.

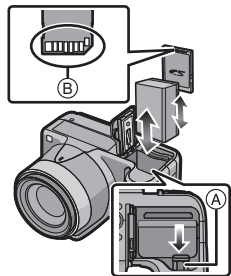

(B): Do not touch the connection terminals of the card.

3 **1:** Close the card/battery door.

2: Slide the release lever in the direction of the arrow.

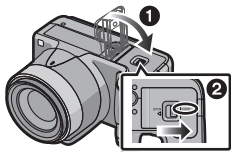


Setting Date/Time (Clock Set)

- The clock is not set when the camera is shipped.

1 Turn the camera on.

- The power lamp ❶ lights when you turn this unit on.

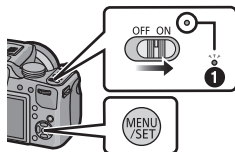

2 Press [MENU/SET].



3 Press ◀/▶ to select the items (year, month, day, hour, minute, display sequence or time display format), and press ▲/▼ to set.



4 Press [MENU/SET] to set.

5 Press [MENU/SET].

Changing the clock setting

Select [CLOCK SET] in the [REC] or [SETUP] menu, and press ▶.


- The clock can be reset as shown in steps 3 and 4

Selecting the Recording Mode

Switching the mode by rotating the mode dial.

Align a desired mode with part ①.

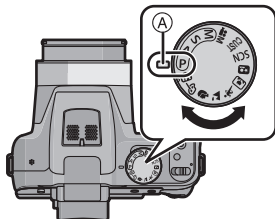

- Rotate the mode dial slowly to select the desired mode.








■ Basic

P	Programme AE Mode
The subjects are recorded using your own settings.	
iA	Intelligent Auto Mode
The subjects are recorded using settings automatically selected by the camera.	

■ Advanced

A	Aperture-Priority AE Mode
The shutter speed is automatically determined by the aperture value you set.	
S	Shutter-Priority AE Mode
The aperture value is automatically determined by the shutter speed you set.	
M	Manual Exposure Mode
The exposure is adjusted by the aperture value and the shutter speed which are manually adjusted.	
 M	Creative Video Mode
Record motion picture with manual settings.	
CUST	Custom Mode
Use this mode to take pictures with previously registered settings.	
SCN	Scene Mode
This allows you to take pictures that match the scene being recorded.	
 CC	Creative Control Mode
Record while checking the image effect.	

■ Advanced Scene Mode


 P	Portrait Mode
Use this mode to take pictures of people.	
 S	Scenery Mode
Use this mode to take pictures of scenery.	
 S	Sports Mode
Use this mode to take pictures of sporting events, etc.	
 C	Close-up Mode
Use this mode to take pictures of a close-by subject.	
 N	Night Portrait Mode
Use this mode to take pictures of night scenes and people against night time scenery.	

Taking Pictures with Your Favourite Settings (Programme AE Mode)

The camera automatically sets the shutter speed and the aperture value according to the brightness of the subject.

You can take pictures with greater freedom by changing various settings in [REC] menu.

1 Set the mode dial to [**P**].

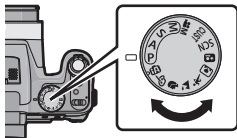


2 Aim the AF area at the point you want to focus on.

3 Press the shutter button halfway to focus.

- (A) Aperture value
- (B) Shutter speed
- (C) ISO sensitivity

- The focus indication (D) (green) lights when the subject is focused.

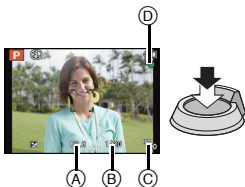

4 Press the shutter button fully (push it in further), and take the picture.



Programme Shift

In Programme AE Mode, you can change the preset aperture value and shutter speed without changing the exposure. This is called Programme Shift. You can make the background more blurred by decreasing the aperture value or record a moving subject more dynamically by slowing the shutter speed when taking a picture in Programme AE Mode.

1 Press the shutter button halfway and display the aperture value and shutter speed value on the screen.

2 While the values are displayed (about 10 seconds), perform the Programme Shift by rotating the rear dial.




- The Programme Shift indication (A) appears on the screen when Programme Shift is activated.
- Programme Shift is cancelled if the camera is turned off or the rear dial is rotated until the Programme Shift indication disappears.

Example of Programme Shift

(A): Aperture value

(B): Shutter speed


- ❶ Programme Shift amount
- ❷ Programme Shift line chart
- ❸ Programme Shift limit

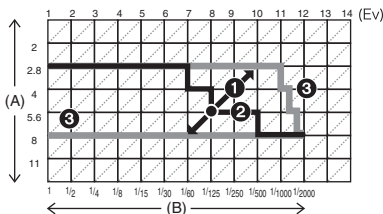

Taking Pictures Using the Automatic Function (Intelligent Auto Mode)

The camera will set the most appropriate settings to match the subject and the recording conditions so we recommend this mode for beginners or those who want to leave the settings to the camera and take pictures easily.


1 Set the mode dial to [**IA**].

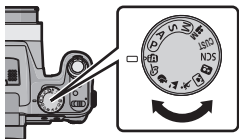

2 Press the shutter button halfway to focus and then press it fully to take the picture.





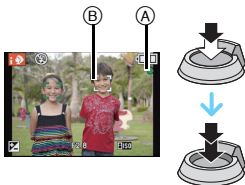


(A) Focus indication

- The AF area (B) is displayed around the subject's face by the Face Detection function. In other cases, it is displayed at the point on the subject which is in focus.



Scene Detection

When the camera identifies the optimum scene, the icon of the scene concerned is displayed in blue for 2 seconds, after which its colour changes to the usual red.

[iA] →	 [i- PORTRAIT]	 [i- SCENERY]
	 [i- MACRO]	 [i- NIGHT PORTRAIT] ^{*1}
	 [i- NIGHT SCENERY]	 [i- SUNSET]
	 [i- BABY] ^{*2}	

*1 Only when [iA] is selected.

*2 When [FACE RECOG.] is set to [ON], [iA] will be displayed for birthdays of registered faces already set only when the face of a person 3 years old or younger is detected.

- [iA] is set if none of the scenes are applicable, and the standard settings are set.
- When [iA], [iA] or [iA] is selected, the camera automatically detects a person's face, and it will adjust the focus and exposure. **(Face Detection)**



Recording Motion Pictures

This unit can record motion pictures in either AVCHD or MP4 formats.

1 Start recording by pressing the motion picture button.

- (A) Available recording time
- (B) Elapsed recording time

- You can record motion pictures fitting each Recording Mode.
- Release the motion picture button right after you press it.
- The recording state indicator (red) (C) will flash while recording motion pictures.

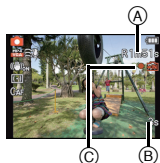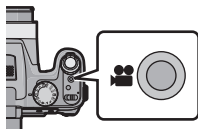


2 Stop the recording by pressing the motion picture button again.

Note

- Motion pictures can be recorded continuously for up to 29 minutes 59 seconds. Also, motion picture recorded continuously in [MP4] is up to 4 GB.

Playing Back Pictures ([NORMAL PLAY])

1 Press [▶].

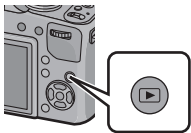

2 Press ◀ or ▶.

- After selecting the motion picture, press ▲ to start playback.



Deleting Pictures


Once deleted, pictures cannot be recovered.

- Pictures on the built-in memory or the card, which are being played back will be deleted.

1 Press [▶].

2 Select the picture to be deleted, and then press [🗑].

- Confirmation screen is displayed.
Picture is deleted by selecting [YES].

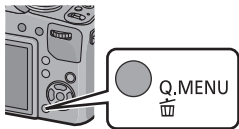

Setting the Menu

Example: In the [REC] menu, change [AF MODE] from [] (1-area-focusing) to [] (Face Detection)

1 Press [MENU/SET].

2 Press ▲/▼ or rotate the rear dial to select the menu item.



3 Press ► or the rear dial.

- Depending on the menu item, its setting may not appear or it may be displayed in a different way.

4 Press ▲/▼ or rotate the rear dial to select the settings.



5 Press [MENU/SET] or the rear dial to set.

■ Close the menu

Press [MENU/SET] or press the shutter button halfway.

■ Switching to other menus

e.g.: Switching to the [SETUP] menu from [REC] Mode menu


1 Press [MENU/SET].

2 Press ◀.

3 Press ▼ or rotate the rear dial to select the [SETUP] menu icon [].

4 Press ► or the rear dial.

- Select a menu item next and set it.

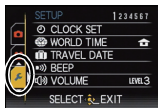


Applicable modes: **[A]** **[P]** **[A]** **[S]** **[M]** **[CUST]** **[M]** **[SCN]**

Compensating the Exposure

Use this function when you cannot achieve appropriate exposure due to the difference in brightness between the subject and the background.

- 1** Press **▲** until **[EXPOSURE]** appears.

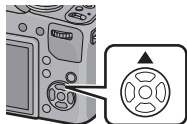

- 2** Press **◀/▶** to compensate the exposure and then press **[MENU/SET]**.



- The exposure compensation value appears on the screen.
- Select **[0 EV]** to return to the original exposure.

■ Operate with the rear dial

- 1** Press the rear dial and enable .
- 2** Rotate the rear dial to compensate the exposure.

(A) Exposure compensation value



(A)



Taking Pictures by Specifying the Aperture/Shutter Speed

Aperture-Priority AE

Set the aperture value to a higher number when you want a sharp focus background. Set the aperture value to a lower number when you want a soft focus background.

1 Set the mode dial to [**A**].

2 Rotate the rear dial to set the aperture value.

(A) Aperture Value

- It will switch between aperture setting operation and Exposure Compensation operation every time the rear dial is pressed.



Shutter-Priority AE

Set with a faster shutter speed when you want to take a sharp picture of a fast moving subject. Set to a slower shutter speed when you want to create a trail effect.

1 Set the mode dial to [**S**].

2 Rotate the rear dial to set the shutter speed.

(B) Shutter Speed

- It will switch between shutter speed setting operation and Exposure Compensation operation every time the rear dial is pressed.



Manual Exposure Mode

Determine the exposure by manually setting the aperture value and the shutter speed.

The Manual Exposure Assistance appears on the lower portion of the screen to indicate the exposure.

1 Set the mode dial to [M].

2 Rotate the rear dial to set the aperture and shutter speed.

Ⓒ Manual Exposure Assistance

- It will switch between aperture setting operation and shutter speed setting operation every time the rear dial is pressed.



Ⓒ

Manual Exposure Assistance

	The exposure is adequate.
	Set to faster shutter speed or larger aperture value.
	Set to slower shutter speed or smaller aperture value.

- The Manual Exposure Assistance is an approximation. We recommend checking the pictures on the playback screen.

Taking 3D pictures (3D Photo Mode)

Pictures are recorded continuously while moving the camera horizontally, and two pictures selected automatically are combined to make a single 3D picture.

To view 3D pictures, a television that supports 3D is required (This unit will play back in 2D).


1 Set the mode dial to [SCN].

2 Press /// to select [3D PHOTO MODE], and then press [MENU/SET].

■ Technique for 3D Photo Mode

Start the recording and then slide the camera horizontally straight from left to right.

- A guide is displayed while recording.
- Move the camera approximately 10 cm (0.33 feet) within approximately 4 seconds using the guide.

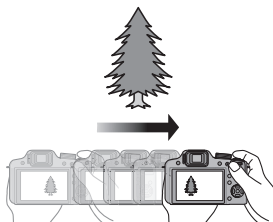

■ To avoid mistakes in 3D recording

- Take a picture of a subject that is not moving.
- Take a picture in a well-lit place, such as outdoors, etc.
- Fix the focus and exposure by pressing the shutter button halfway, then press the shutter button fully and move the camera.
- When you start recording with the subject slightly to the right of the centre, the subject will be close to the centre in the final picture.

Reading the Operating Instructions (PDF format)

More detailed instructions on the operation of this camera are contained in “Operating Instructions for advanced features (PDF format)” in the supplied CD-ROM. Install it on your PC to read it.

■ For Windows


1 Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).

2 Click the [Operating Instructions].

3 Select the desired language and then click [Operating Instructions] to install.


Ⓐ To return to the install menu.

4 Double click the “Operating Instructions” shortcut icon on the desktop.

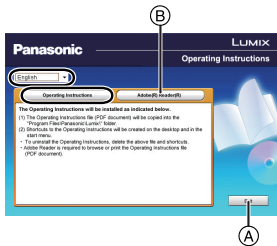

■ When the Operating Instructions (PDF format) will not open

 You will need Adobe Acrobat Reader 5.0 or later or Adobe Reader 7.0 or later to browse or print the Operating Instructions (PDF format).

Insert the CD-ROM containing the Operating Instructions (supplied), click  and then follow the messages on the screen to install.

(Compatible OS: Windows XP SP3/Windows Vista SP2/Windows 7)




- You can download and install a version of Adobe Reader that you can use with your OS from the following Web Site.

<http://get.adobe.com/reader/otherversions>

■ To uninstall the Operating Instructions (PDF format)

Delete the PDF file from the "Program Files\Panasonic\Lumix\" folder.

■ For Mac

-  Turn the PC on and insert the CD-ROM containing the Operating Instructions (supplied).
-  Open the "Manual" folder in the CD-ROM and then copy the PDF file with the desired language inside the folder.
-  Double click the PDF file to open it.

Specifications

Digital Camera:

Information for your safety

Power Source:	DC 8.4 V
Power Consumption:	1.7 W (When recording with LCD Monitor) 1.5 W (When recording with Viewfinder) 1.0 W (When playing back with LCD Monitor) 0.7 W (When playing back with Viewfinder)

Camera effective pixels	12,100,000 pixels	
Image sensor	1/2.33" CCD, total pixel number 12,500,000 pixels, Primary colour filter	
Lens [NANO SURFACE COATING]	Optical 24× zoom, f = 4.5 mm to 108 mm (35 mm film camera equivalent: 25 mm to 600 mm) Wide end: F2.8 to F8.0 (when recording motion pictures: F2.8 to F11) Tele end: F5.2 to F8.0 (when recording motion pictures: F5.2 to F11)	
Digital zoom	Max. 4×	
Extra optical zoom	Max. 46.9× (When set to 3,000,000 pixels [3M] or less)	
Focus range	AF	30 cm (0.99 feet) (Wide)/ 2 m (6.57 feet) (Tele) to ∞
	AF Macro/MF/ Intelligent Auto/ Motion Picture	1 cm (0.04 feet) (Wide)/ 1 m (3.28 feet) (Tele) to ∞
	Scene Mode	There may be differences in the above settings.

Shutter system	Electronic shutter+Mechanical shutter
Burst recording	
Burst speed	Approx. 3.7 pictures/second
Number of recordable pictures	Max. 7 pictures
Hi-speed burst	
Burst speed	Approx. 10 pictures/second (Speed priority) Approx. 7 pictures/second (Image priority) [3M (4:3), 2.5M (3:2), 2M (16:9) or 2.5M (1:1) is selected as the picture size.]
Number of recordable pictures	Approx. 15 to 100 pictures
Minimum Illumination	Approx. 9 lx (when i-low light is used, the shutter speed is 1/25th of a second)
Shutter speed	
Still picture	60 seconds to 1/2000th of a second [STARRY SKY] Mode: 15 seconds, 30 seconds, 60 seconds
Motion pictures	1/30 to 1/20000th of a second Creative Video Mode (Manual Exposure/Manual Focus): 1/8 to 1/20000th of a second

Exposure (AE)	Programme AE (P)/Aperture-Priority AE (A)/ Shutter-Priority AE (S)/Manual Exposure (M) Exposure compensation (1/3 EV Step, -3 EV to +3 EV)	
Metering mode	Multiple/Centre weighted/Spot	
LCD monitor	3.0" TFT LCD (3:2) (Approx. 461,000 dots) (field of view ratio about 100%)	
Viewfinder	Colour LCD Viewfinder (Approx. 202,000 dots) (field of view ratio about 100%) (with diopter adjustment -4 to +4 diopter)	
Flash	Built-in pop up flash	
	Flash range: Approx. 30 cm (0.99 feet) to 9.5 m (31.16 feet) (Wide, [ISO AUTO] is set)	
Microphone	Stereo	
Speaker	Monaural	
Recording media	Built-in Memory (Approx. 70 MB)/SD Memory Card/ SDHC Memory Card/SDXC Memory Card	
Recording file format		
Still Picture	JPEG (based on "Design rule for Camera File system", based on "Exif 2.3" standard, DPOF corresponding)/ MPO	
Motion pictures	AVCHD/MP4	
Audio compression	AVCHD	AC3/2 ch
	MP4	AAC/2 ch
Interface		
Digital	"USB 2.0" (High Speed) * Data from the PC can not be written to the camera using the USB connection cable.	
Analogue video Audio	NTSC/PAL Composite (Switched by menu) Audio line output (monaural)	

Terminal	
[AV OUT/ DIGITAL]	Dedicated jack (8 pin)
[HDMI]	MiniHDMI TypeC
Dimensions (excluding the projecting parts)	Approx. 120.3 mm (W)×79.8 mm (H)×91.9 mm (D) [4.74"(W)×3.14"(H)×3.62"(D)]
Mass	Approx. 498 g/1.10 lb (with card and battery) Approx. 454 g/1.00 lb (excluding card and battery)
Operating temperature	0 °C to 40 °C (32 °F to 104 °F)
Operating humidity	10%RH to 80%RH

Battery Charger (Panasonic DE-A84A):

Information for your safety

Input:	AC ~ 110 V to 240 V, 50/60 Hz, 0.15 A
Output:	DC --- 8.4 V, 0.43 A

Battery Pack (lithium-ion) (Panasonic DMW-BMB9E):

Information for your safety

Voltage/capacity:	7.2 V/895 mAh
--------------------------	---------------

- SDXC Logo is a trademark of SD-3C, LLC.
- The "AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
- Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- HDAVI Control™ is a trademark of Panasonic Corporation.
- QuickTime and the QuickTime logo are trademarks or registered trademarks of Apple Inc., used under license therefrom.
- Mac and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.
- Windows and Windows Vista are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Other names of systems and products mentioned in these instructions are usually the registered trademarks or trademarks of the manufacturers who developed the system or product concerned.

This product is licensed under the AVC patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard ("AVC Video") and/or (ii) decode AVC Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See <http://www.mpegla.com>.

AVCHD™

VIERA
Link

HDMI

DOLBY
DIGITAL
STEREO CREATOR



Pursuant to at the directive 2004/108/EC, article 9(2)

Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany



Panasonic Corporation

Web Site: <http://panasonic.net>

© Panasonic Corporation 2011

VQT3R40

F0711HY0 (10000 (A))